

MAINTENANCE SCHEDULES (Continued)

105,000 Miles (168 000 km) or at 84 months

- Check engine coolant level, hoses, and clamps.
- Change engine oil.
- Replace engine oil filter.
- Inspect brake hoses.
- Lubricate ball joints.
- Lubricate steering linkage (4x4 and 4x2).
- Check manual transmission fluid level.
- Check exhaust system.

112,500 Miles (180 000 km) or at 90 months

- Check engine coolant level, hoses, and clamps.
- Change engine oil.
- Replace engine oil filter.
- Inspect brake hoses.
- Inspect brake linings.
- Lubricate steering linkage (4x4 only).
- Check manual transmission fluid level.
- Check exhaust system.

120,000 Miles (192 000 km) or at 96 months

- **Replace air cleaner element.**
- **Replace ignition cables.**
- **Replace spark plugs.**
- Inspect drive belt, adjust tension as necessary.
- Check engine coolant level, hoses, and clamps.
- Change engine oil.
- Replace engine oil filter.
- Inspect brake hoses.
- Lubricate ball joints.
- Lubricate steering linkage (4x4 and 4x2).
- Drain and refill automatic transmission fluid.
- Check manual transmission fluid level.
- Drain and refill transfer case fluid.
- Check exhaust system.

Important: Inspection and service should also be performed any time a malfunction is observed or suspected.

SCHEDULE "B"

Follow Schedule "B" if the vehicle is usually operated under one or more of the following conditions.

- Frequent short trips driving less than 5 miles (8 km).
- Frequent driving in dusty conditions.
- Frequent trailer towing.
- Extensive idling.
- More than 50% of driving is at sustained high speeds during hot weather, above 90°F (32°C).
- Off-road driving.
- Desert operation.

3,000 Miles (5 000 km)

- Check engine coolant level, hoses, and clamps.
- Change engine oil.
- Replace engine oil filter.

- Inspect brake hoses.
- Lubricate steering linkage.
- Check exhaust system.

6,000 Miles (10 000 km)

- Check engine coolant level, hoses, and clamps.
- Change engine oil.
- Replace engine oil filter.
- Inspect brake hoses.
- Lubricate ball joints.
- Lubricate steering linkage.
- Check manual transmission fluid level.
- Check exhaust system.

9,000 Miles (14 000 km)

- Check engine coolant level, hoses, and clamps.
- Change engine oil.
- Replace engine oil filter.
- Inspect brake hoses.
- Lubricate steering linkage.
- Check exhaust system.

12,000 Miles (19 000 km)

- Check engine coolant level, hoses, and clamps.
- Change engine oil.
- Replace engine oil filter.
- Inspect brake hoses.
- Inspect brake linings.
- Lubricate ball joints.
- Lubricate steering linkage.
- Drain and refill automatic transmission fluid.
- Check manual transmission fluid level.
- Change front and rear axle fluid.
- Check exhaust system.

15,000 Miles (24 000 km)

- **Inspect engine air cleaner element, replace as necessary.**
- Check engine coolant level, hoses, and clamps.
- Change engine oil.
- Replace engine oil filter.
- Inspect brake hoses.
- Lubricate steering linkage.
- Check exhaust system.

18,000 Miles (29 000 km)

- Check engine coolant level, hoses, and clamps.
- Change engine oil.
- Replace engine oil filter.
- Inspect brake hoses.
- Lubricate ball joints.
- Lubricate steering linkage.
- Check manual transmission fluid level.
- Check exhaust system.