

TAIL LAMP BULB (Continued)

- (2) Remove the screws that secure the tail lamp unit to the quarter panel.
- (3) Remove the tail lamp unit from the quarter panel.
- (4) Rotate the tail lamp bulb socket counterclockwise and remove the socket from the tail lamp housing (Fig. 32).
- (5) Pull the bulb out of the socket.

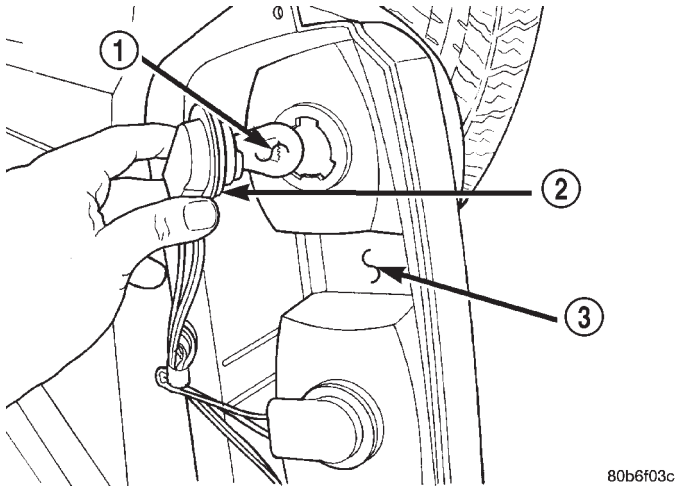


Fig. 32 Bulb Socket Removal

- 1 - TAIL LAMP BULB
- 2 - BULB SOCKET
- 3 - TAIL LAMP HOUSING

INSTALLATION

- (1) Insert the bulb into the tail lamp bulb socket.
- (2) Position the tail lamp unit to the quarter panel.
- (3) Insert the bulb socket into the tail lamp housing and rotate the socket clockwise.
- (4) Position the tail lamp unit onto the quarter panel.
- (5) Install the screws that secure the tail lamp unit to the quarter panel.

TAIL LAMP UNIT

DESCRIPTION

The two rear tail lamp units consist of three bulbs, a lens, and a housing. One bulb is a two filament bulb used for tail lamp and stop lamp functions. One single filament bulb is for turn signal functions. The other bulb is a single filament bulb used for back-up lamp illumination.

OPERATION

Each tail lamp unit can be serviced separately. Each bulb can also be serviced separately. The head-lamp switch controls tail lamp operation. The left

multi-function switch on the steering column controls turn signal operation, and the back-up lamp switch controls the back-up lamp operation. The brake lamp switch controls stop lamp operation.

REMOVAL

- (1) Open the liftgate.
- (2) Remove the screws that secure the tail lamp unit to the quarter panel (Fig. 33).
- (3) Grasp the tail lamp unit and pull it rearward to disengage it from the grommet at the base of the lamp.
- (4) Rotate the bulb sockets counterclockwise and remove the sockets from the tail lamp housing.

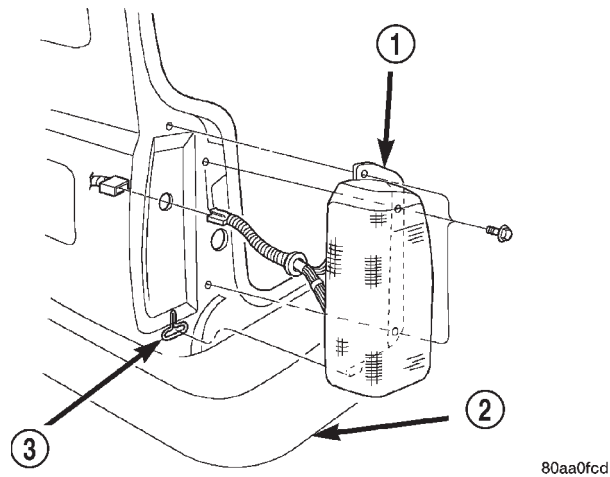


Fig. 33 Tail Lamp

- 1 - TAIL LAMP
- 2 - REAR BUMPER
- 3 - GROMMET

- (5) Remove the tail lamp unit from the quarter panel.

INSTALLATION

- (1) Position the tail lamp unit to the quarter panel.
- (2) Insert the bulb sockets in to the tail lamp housing and rotate the sockets clockwise.
- (3) Position the tail lamp unit the quarter panel and push forward to engage the grommet.
- (4) Install the screws that secure the tail lamp unit to the quarter panel.
- (5) Close the liftgate.

TURN SIGNAL CANCEL CAM

DESCRIPTION

The turn signal cancel cam is concealed within the steering column below the steering wheel. The turn signal cancel cam consists of two lobes that are inte-